




# GPS Director

## GD-101 Quick Start Guide

Version1.0



# Accessories

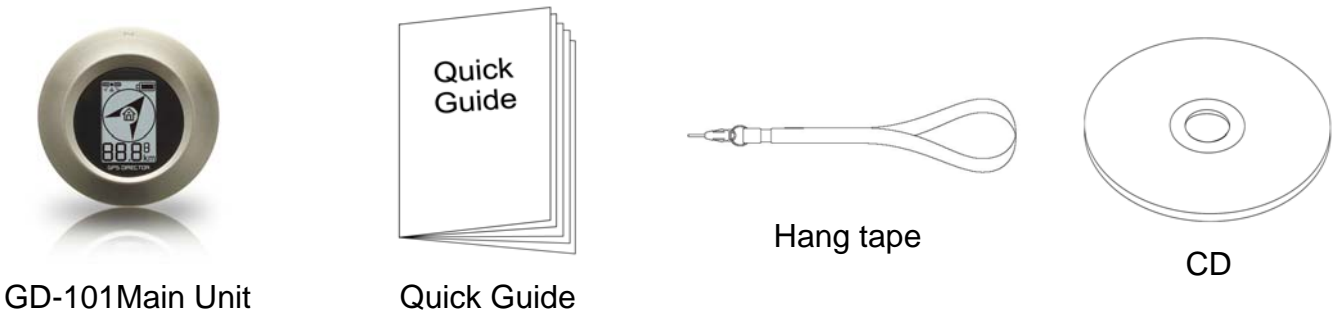






**NOTE :**  
If any accessory is not included or damaged, please contact the local dealer.

# Appearance


 






Front view and Back view		
❶	Display	Shows the GPS fix status, power level, destination direction and distance
❷	Battery Cover	Open the battery cover by rotating it according to the arrow.
❸	Power/Backlight Button	<b>Short-click (1sec):</b> Turn on backlight. <b>Long-click (2sec):</b> 1. Power off device under main screen. 2. Return to last page under each setting screen.
❹	Selection/ Setting Button	<b>Short-click (1sec):</b> To select. <b>Long-click (2sec):</b> To set. Make GD-101 enter main screen by long clicking Power/Backlight Button and Selection/ Setting Button at the same time.



 



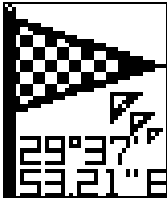
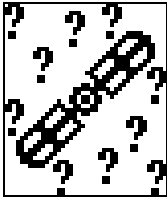
START TO USE

Install Battery		Magnetic North Adjustment
Open Battery cover	Loosen the cover	<div>1. When using GD-101 for the first time, GD-101 will automatically perform the magnetic-north adjustment as seen in the screenshot below.</div>  <div>2. For the method of adjustment, please refer to <b>User Manual Chapter 3-2</b>.</div> <div>3. If GD-101 shows the incorrect or inaccurate direction, please perform the magnetic adjustment by operating the function button.</div>
		
Install Battery	Lock the cover	
		

MAIN Screen








	Icon	Explanation
		The GPS fix indication  will keep ON when device gets a GPS fix. GPS fix indicator will flash when device does not have GPS fix.
		The distance between GD-101 and destination will only be shown/ displayed when device has GPS fix.
		The direction of the setting destination of GD-101. The arrow will direct to the destination after GD-101 has GPS fix and has performed the magnetic-north adjustment.
		What is shown on upper right corner is the battery power level

# Automatic Setting the Destination




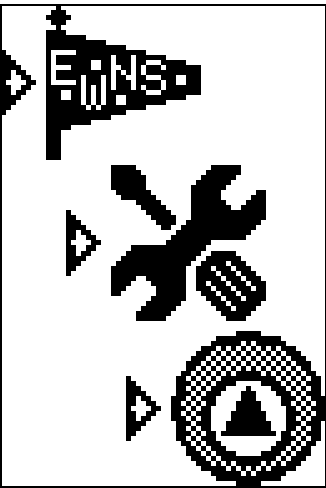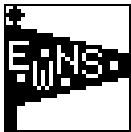





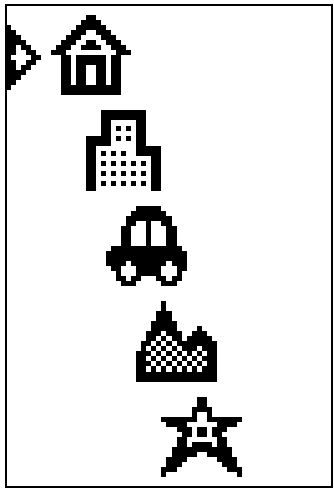

	<div>Description</div> <div>1. Under direction indication screen, click Selection/ Setting button to select and set the following 5 destination's coordinates.</div> <div></div> <div>2. After GD-101 has GPS fix, long click Selection/ Setting button will save the present coordinates as the selected destination's coordinates.</div>
	<p>While GD-101 is saving coordinates, GD-101 will display as seen in the screen shot to the left and then return to the direction indication screen.</p>
	<p>If you try to save the present coordinates under <u>no GPS fix status</u>, GD-101 will display as seen in the screenshot to the left and then return to the direction indication screen.</p>

# Manual Setting Destination's Coordinate


In the direction indication screen, you could make GD-101 enter main screen by long clicking Power/Backlight Button and Selection/ Setting Button at the same time.

	ICON	Function	Operation
		Manual Set Destination's Coordinate	<div>Long click Selection/Setting button to enter setting screen.</div> <div>You could set the following 5 destination's coordinates.</div> <div></div>


## Setting Destination's Coordinate

	ICON	Explanation
		Set Home's coordinates. The indication  will be ON when the destination's coordinates are set.
		Set Building's coordinates. The indication  will be ON when the destination's coordinates are set.
		Set Car's coordinates. The indication  will be ON when the destination's coordinates are set.
		Set Travel's coordinates. The indication  will be ON when the destination's coordinates are set.
		Set My Favorite's coordinates. The indication  will be ON when the destination's coordinates are set.

## Setting Destination's Longitude

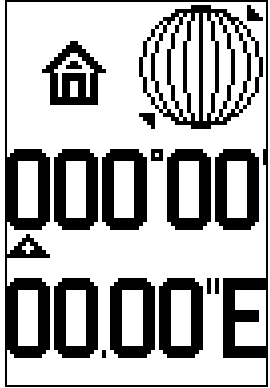	1. The upper left corner is the selected destination. The number is the setting longitude (East or West). An arrow will be indicated to the number on the initial screen.
	2. <b>Short click</b> Selection/Setting button to select the number. <b>Long click</b> Selection/Setting button to enter the selected value and move to the next digit for setting.
	3. The maximum setting is 180 ° 00 '00 . 00 "

## Setting Destination's Latitude

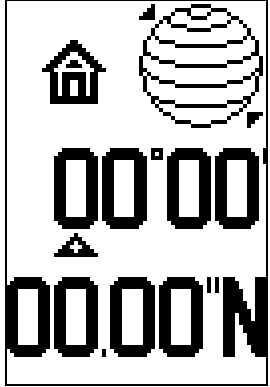	1. The upper left corner is the selected destination. The number is the setting longitude (North or South). An arrow will be indicated to the number on the initial screen.
	2. <b>Short click</b> Selection/Setting button to select the number. <b>Long click</b> Selection/Setting button to enter the selected value and move to the next digit for setting.
	3. The maximum setting is 90 ° 00 '00 . 00 "